



AIRWOOD DESIGN

LP wall displays

INCLUDED PARTS

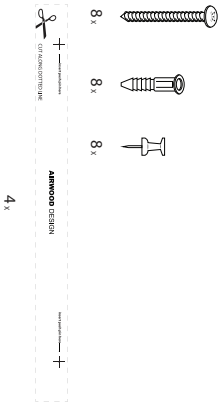

REQUIRED TOOLS

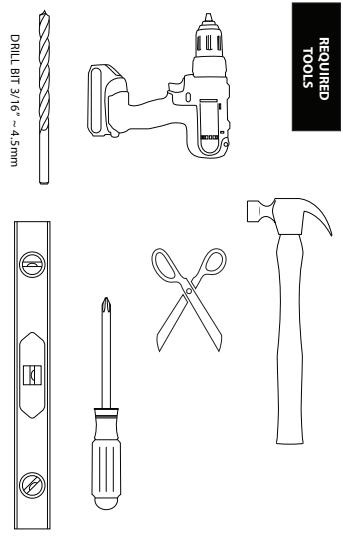

IMPORTANT INFORMATION READ CAREFULLY
WARNING
 ENCLOSED WALL ANCHORS ARE DESIGNED FOR USE WITH DRYWALL ONLY!
 CONSULT YOUR LOCAL HARDWARE DEALER FOR ANCHORS APPROPRIATE FOR USE WITH YOUR WALL.



USE PUSH PINS, STRING & LEVEL FOR CONSISTENT RESULTS!

MOUNTING INSTRUCTIONS ON BACK →



CUT ALONG DOTTED LINE



AIRWOOD DESIGN




CUT ALONG DOTTED LINE



AIRWOOD DESIGN




CUT ALONG DOTTED LINE



AIRWOOD DESIGN




CUT ALONG DOTTED LINE



AIRWOOD DESIGN




1

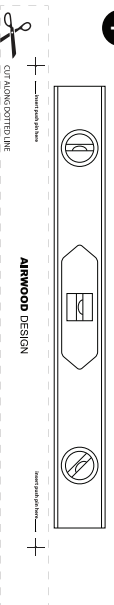


Use cutout template to locate holes for wall anchors.
Insert 1 push pin, check for level & insert 2nd pin.
Remove pins & template, use holes as a guide for drilling.


2

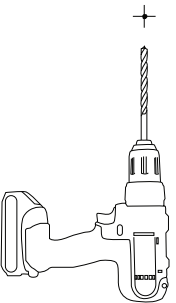

Drill holes & tap anchors.

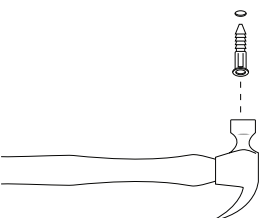

3

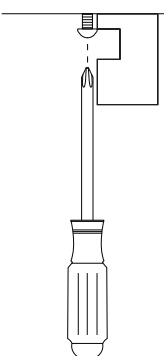

Use face of wall display as a spacer & insert screws.
Install by pushing display against wall and pull down.

4

